



Step 1: release the two screws shown in the blue circle.



Step 2: remove the red bracket of the electric hoist and take the rope drum out



Step 3: remove the wedge from the red rope drum, then you can take the broken steel rope out.

Step 4: As for how to fasten the new steel rope on the drum, please refer to the video attached.